

DMX512 Configuration					
Ch1	Ch2		Ch3		Ch4
Ch1	Ch2-8		Ch9		Ch10
Mode	Pattern	Chase	Pattern Strobe	Chase Speed	Dimmer
240-255 Stand-alone	250-255 Pattern 25	250-255 Chase 25		255	100%
	240-249 Pattern 24	240-249 Chase 24			
	230-239 Pattern 23	230-239 Chase 23			
	220-229 Pattern 22	220-229 Chase 22			
	210-219 Pattern 21	210-219 Chase 21			
	200-209 Pattern 20	200-209 Chase 20			
	190-199 Pattern 19	190-199 Chase 19			
	180-189 Pattern 18	180-189 Chase 18			
	170-179 Pattern 17	170-179 Chase 17			
	160-169 Pattern 16	160-169 Chase 16			
120-239 Chase	150-159 Pattern 15	150-159 Chase 15	10-255	0	0%
	140-149 Pattern 14	140-149 Chase 14			
	130-139 Pattern 13	130-139 Chase 13			
	120-129 Pattern 12	120-129 Chase 12			
	110-119 Pattern 11	110-119 Chase 11			
	100-109 Pattern 10	100-109 Chase 10			
	090-099 Pattern 09	090-099 Chase 09			
	080-089 Pattern 08	080-089 Chase 08			
	070-079 Pattern 07	070-079 Chase 07			
	060-069 Pattern 06	060-069 Chase 06			
0-119 Pattern	050-059 Pattern 05	050-059 Chase 05	0-9	0	0%
	040-049 Pattern 04	040-049 Chase 04			
	030-039 Pattern 03	030-039 Chase 03			
	020-029 Pattern 02	020-029 Chase 02			
	010-019 Pattern 01	010-019 Chase 01			
	000-009 Blackout	000-009 Blackout			

Blackout	Blackout des Geräts	
Funktion	1. Synchron Stroboskop 2. Sound Stroboskop 3. 2-Licht Stroboskop	Chase (10 Chases)
Modus	Sound/Stroboskop (LED aus)	Chase (LED leuchtet)