

SUPERFLY HP

DMX CONTROL TABLE



2-CHANNEL MODE			
CHANNEL		VALUE	FUNCTION
CH1	Mode Selection	000 - 127	Music control
		128 - 255	Auto Mode
CH2	Mode Options	000 - 255	Sensitivity / Speed

5-CHANNEL MODE			
CHANNEL		VALUE	FUNCTION
CH1	Colour selection	000 - 007	Red
		008 - 015	Green
		016 - 023	Blue
		024 - 031	White
		032 - 039	Amber
		040 - 047	Red/ Green
		048 - 055	Red/ Blue
		056 - 063	Red/ White
		064 - 071	Red/ Amber
		072 - 079	Green/ Blue
		080 - 087	Green/ White
		088 - 095	Green/ Amber
		096 - 103	Blue/ White
		104 - 111	Blue/ Amber
		112 - 119	Red/ Green/ Blue
		120 - 127	Red/ Green/ White
		128 - 135	Red/ Green/ Amber
		136 - 143	Red/ Blue/ White
		144 - 151	Red/ Blue/ Amber
		152 - 159	Red/ White/ Amber
		160 - 167	Blue/ White/ Amber
		168 - 175	Green/ Blue/ White
		176 - 183	Green/ Blue/ Amber
		184 - 191	Green/ White/ Amber
192 - 199	Red/ Green/ Blue/ White		
200 - 207	Red/ Blue/ White/ Amber		
208 - 215	Red/ Green/ White/ Amber		
216 - 223	Red/ Green/ Blue/ Amber		
224 - 231	Green/ Blue/ White/ Amber		
232 - 239	Red/ Green/ Blue/ White/ Amber		
	automatic colour change	240 - 255	automatic colour change
CH2	mirror rotation	000 - 009	No movement
		010 - 255	slow to fast
CH3	Stroboscope	000 - 001	No strobe
		002 - 255	slow to fast
CH4	Dimmer	000 - 255	0 % to 100 %
CH5	Colour change speed	000 - 255	slow to fast